


INSTALLATION INSTRUCTIONS

PREMIUM EVO SERIES W/ WARNING & PEAK

WHITE / RED / GREEN / BLUE LED DISPLAY

Volt Gauge

BACK VIEW

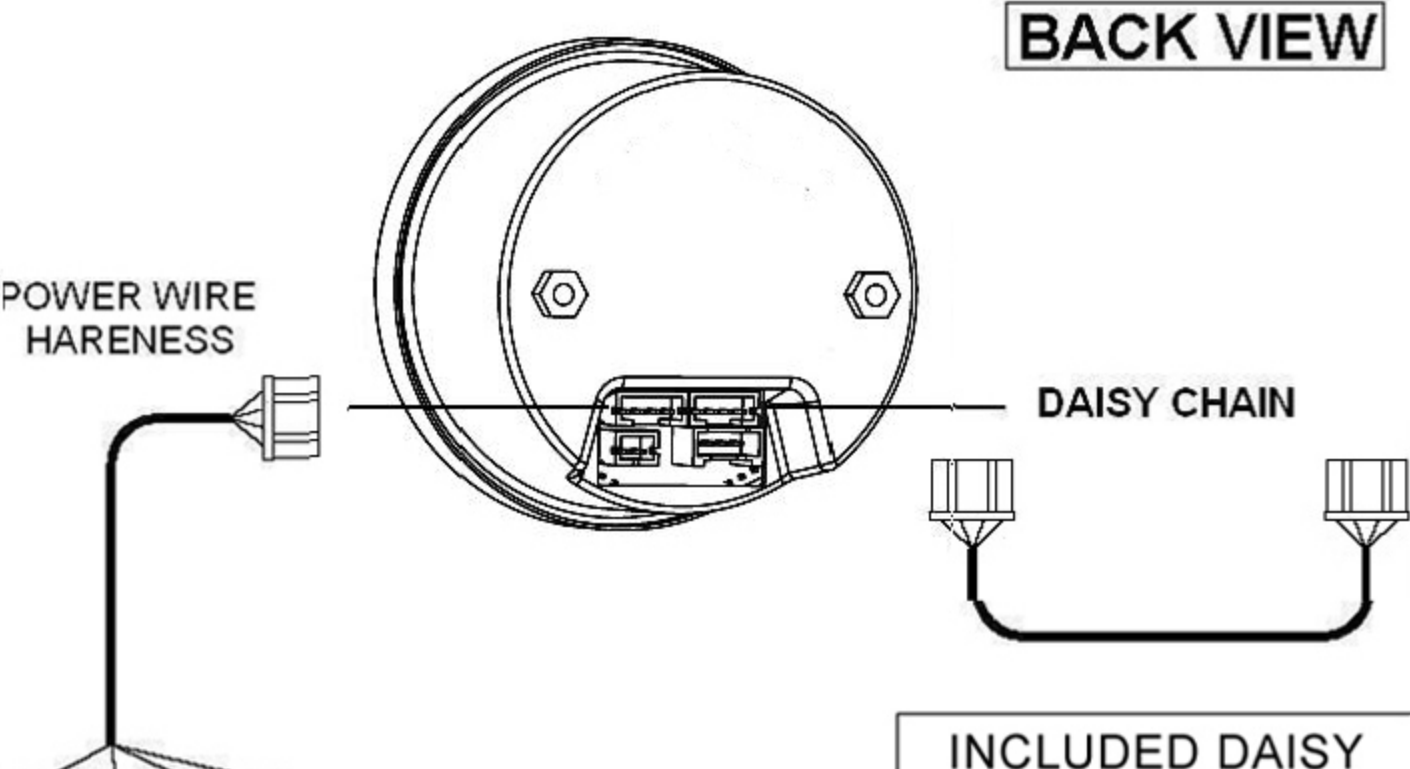

POWER WIRE HARENESS

DAISY CHAIN

INCLUDED DAISY CHAIN USED TO POWER ADDITIONAL GAUGES

RED - Constant 12v
BLACK - Ground
WHITE - Accessory 12v
ORANGE - 12v Headlight switch
(For dimming at night)

GAUGE

MOUNTING CUP


VISOR

FOAM TAPE


PEAK BLUE LED

WARNING RED LED

DOUBLE SIDED TAPE

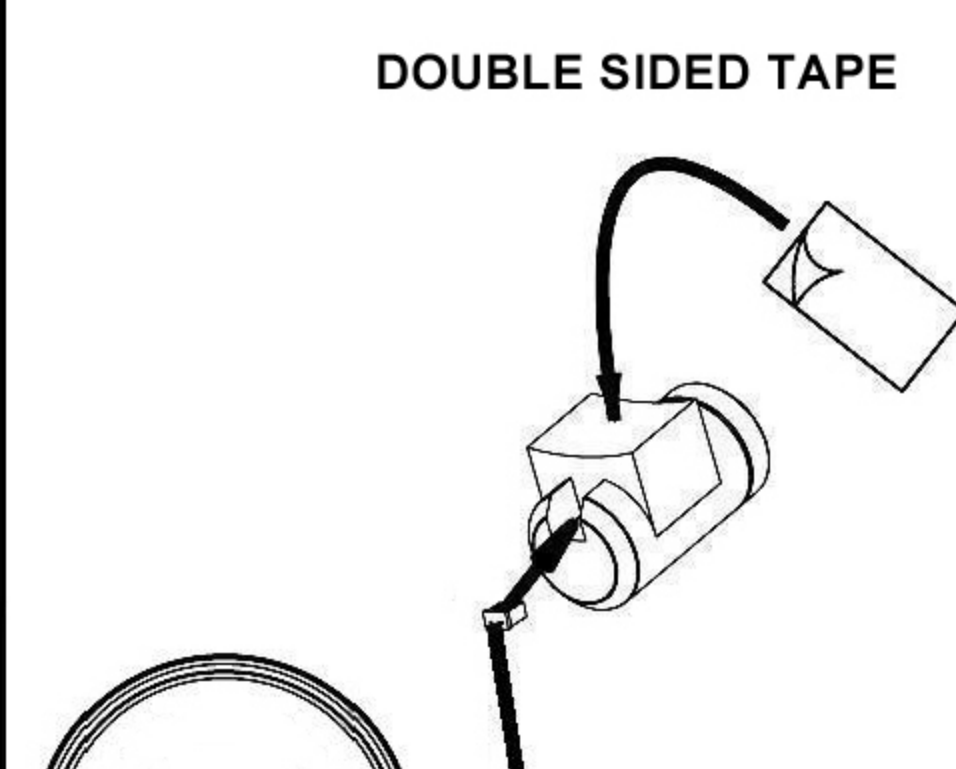


OPTIONAL EXTERNAL WARNING LIGHT SOLD SEPARATELY

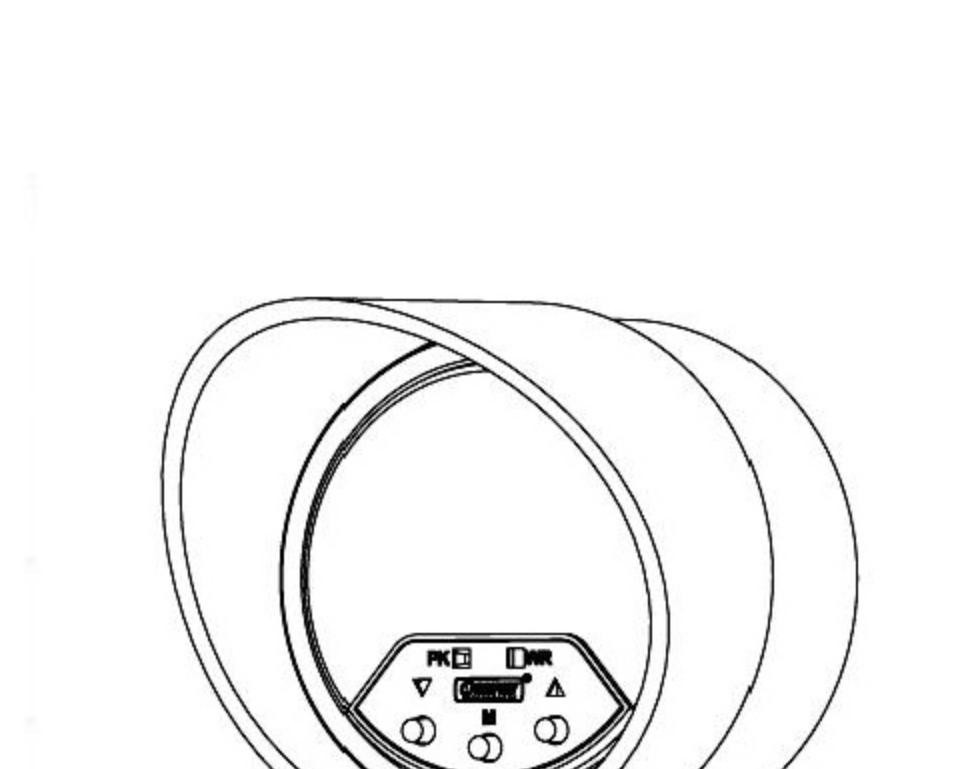

Complete Set

Boost / Vacuum Gauge

BACK VIEW

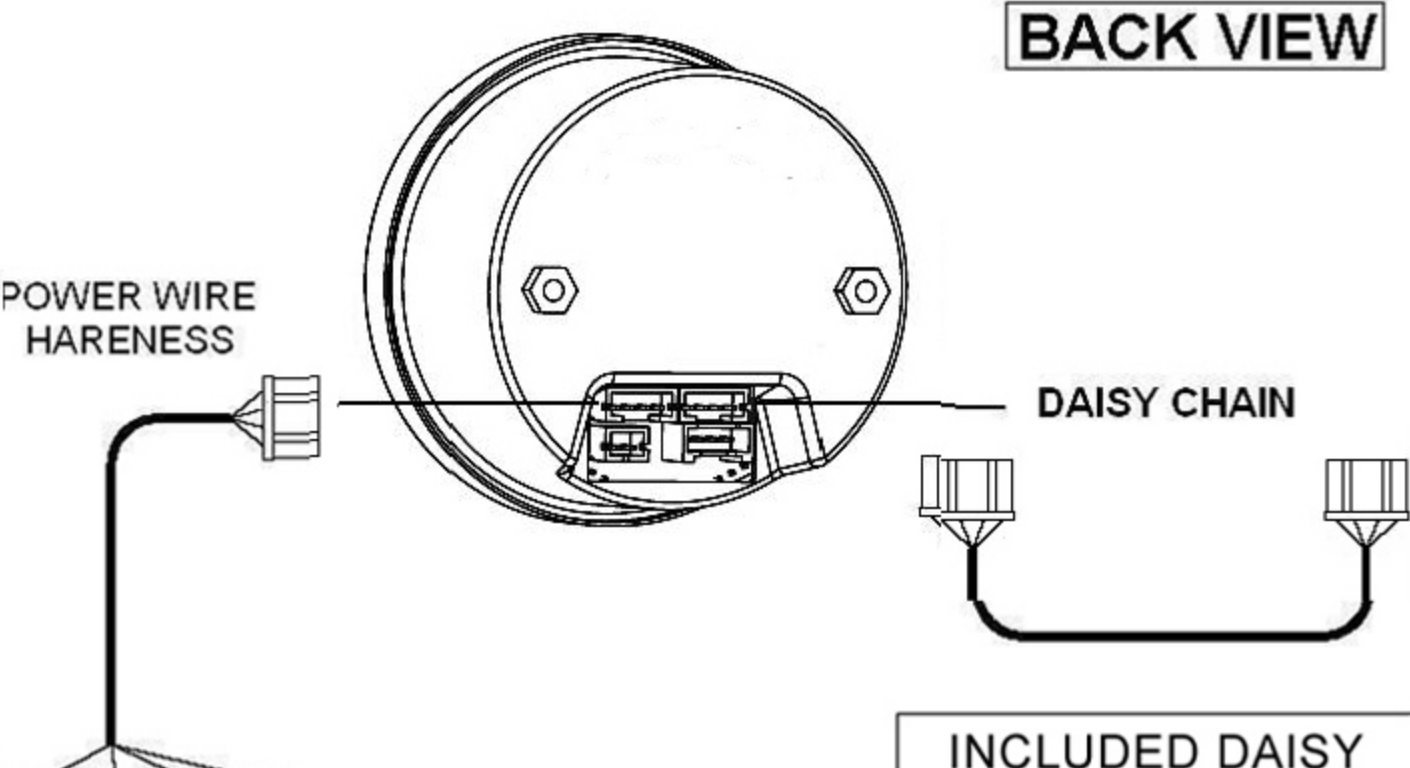

POWER WIRE HARENESS

DAISY CHAIN

INCLUDED DAISY CHAIN USED TO POWER ADDITIONAL GAUGES

RED - Constant 12v
BLACK - Ground
WHITE - Accessory 12v
ORANGE - 12v Headlight switch
(For dimming at night)

GAUGE

MOUNTING CUP


VISOR

FOAM TAPE


PEAK BLUE LED

WARNING RED LED

DOUBLE SIDED TAPE

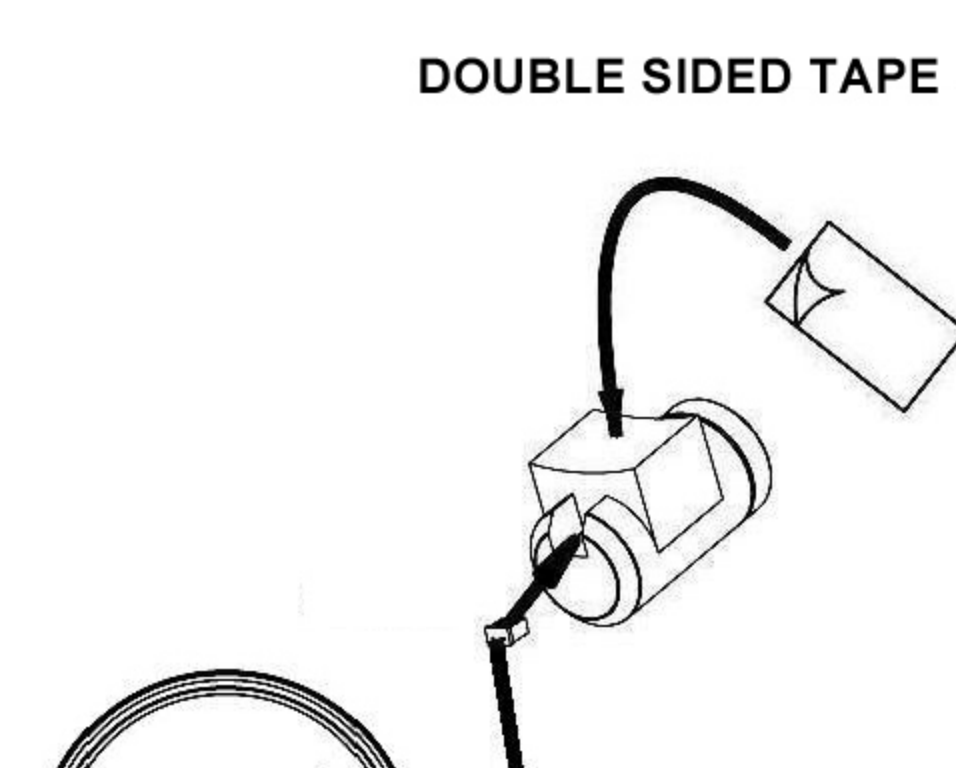

OPTIONAL EXTERNAL WARNING LIGHT SOLD SEPARATELY

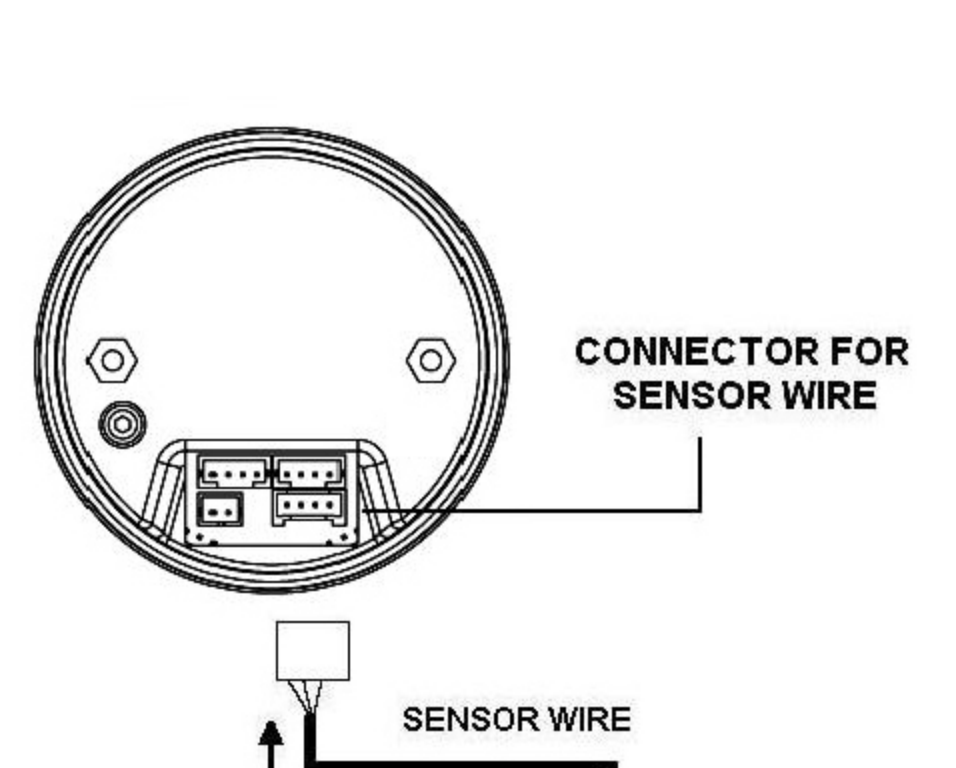

CONNECTOR FOR SENSOR WIRE

SENSOR WIRE


WHITE CONNECTOR

BLACK RED WHITE

BACK VIEW

VACUUM / BOOST SENSOR

BOOST INSTALLATION

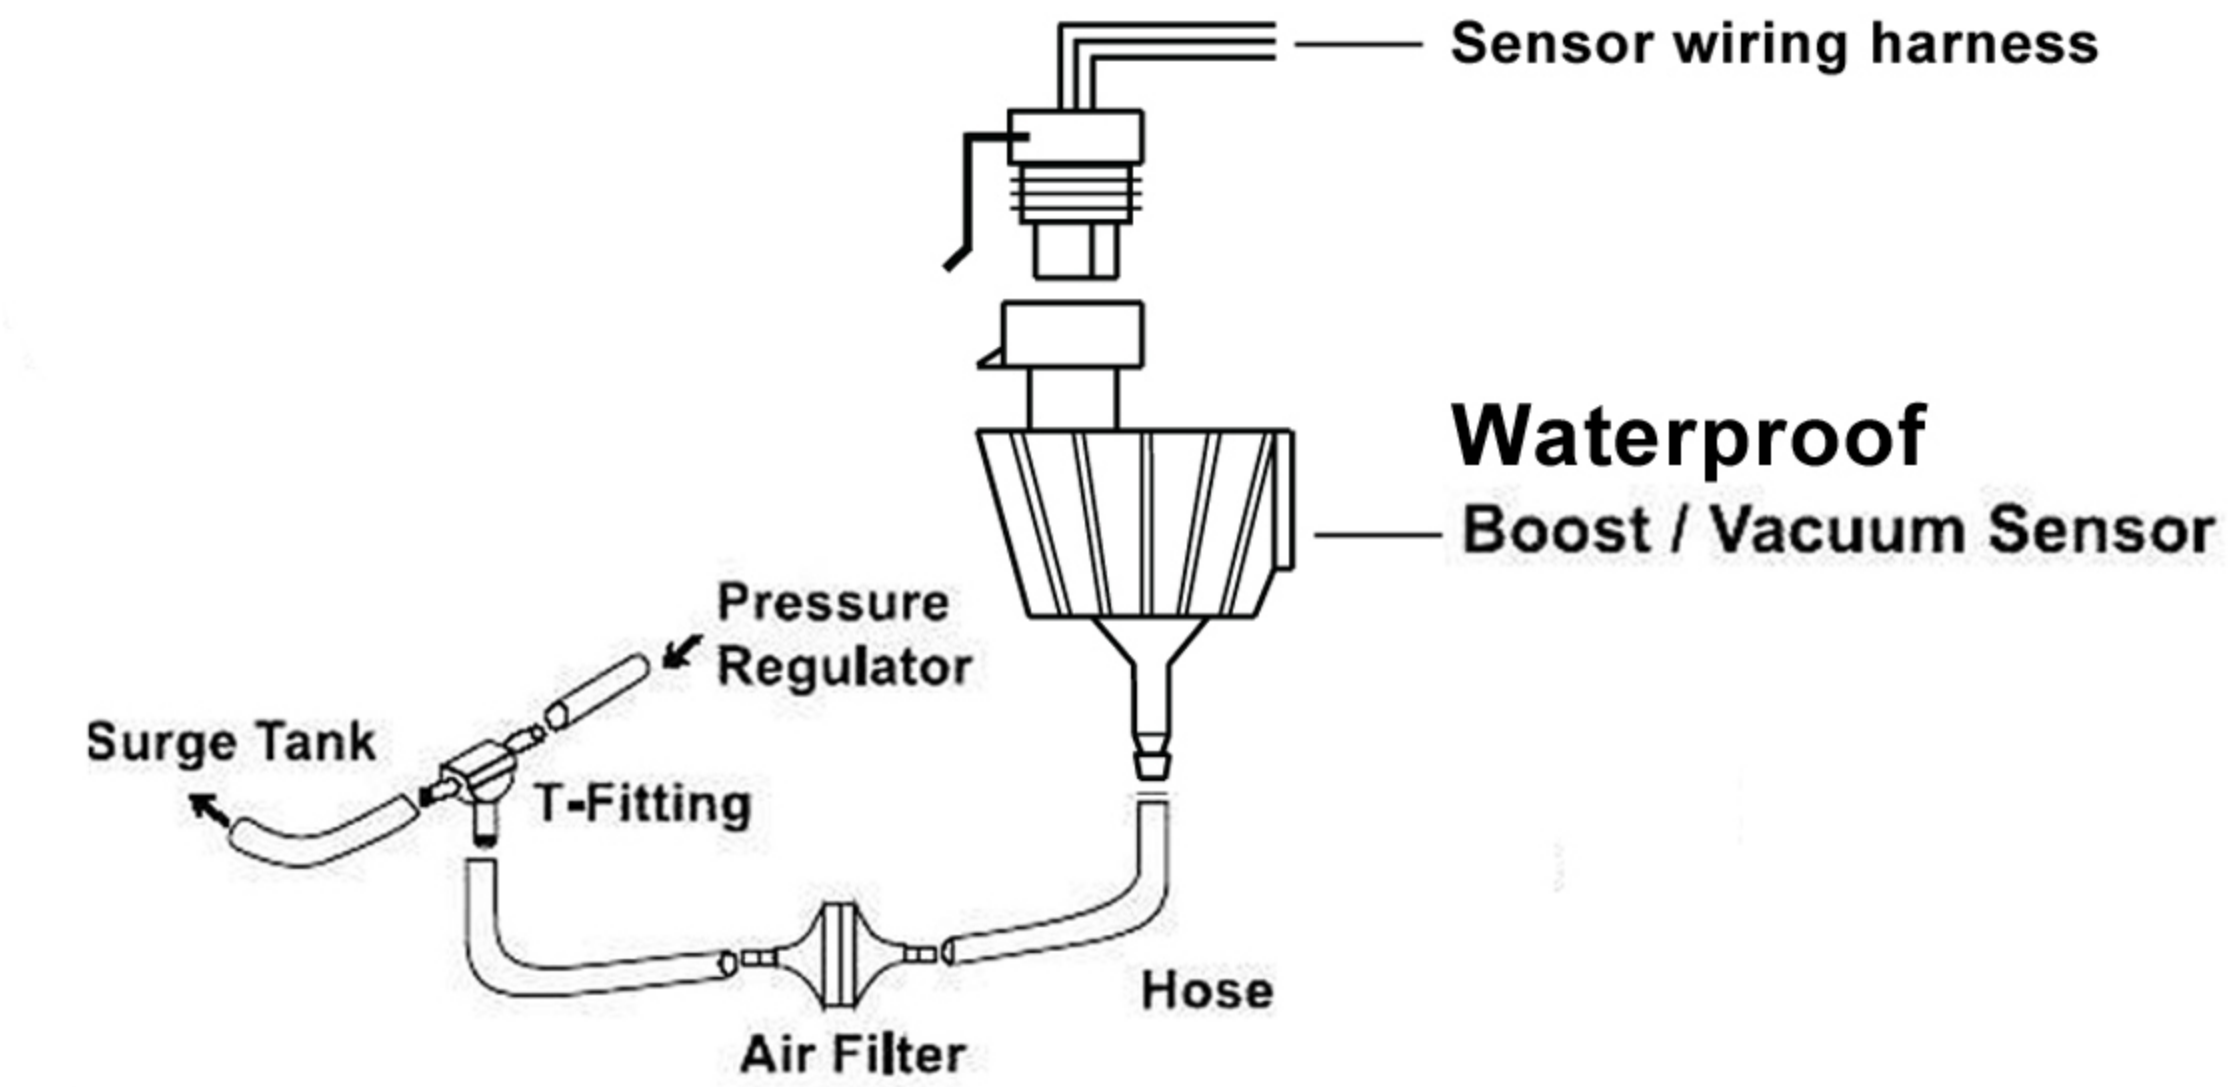

Is your gauge not sitting at zero?

To compensate for altitude you can zero out the gauge using the supplied key (or 2mm allen wrench).

With the key on - engine off, wait for the gauge to stop moving and slowly turn the screw until the gauge reads zero.

