


Prosport Inc.

EVO Series Oil / Fuel Pressure

Blue / Red Display

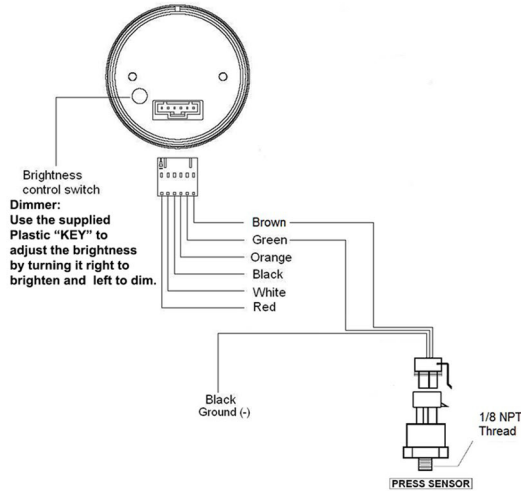

Wiring Instructions


Red Wire- 12v Accessory Power
White Wire- 12v Accessory Power
Black Wire- Ground
Orange Wire- 12v Headlight Switched Power
 (This is a power source that only gets power when headlights are on)

Installing the sensor:

Pressure sender thread pitch is 1/8th NPT It is suppose to become tighter when installing. Please do not over tighten the sensor. ***Normal for exposed theads after installing**
Black to chassis ground
Brown from sender to brown on gauge harness.
Green from sender to green on gauge harness.

Lighting Options


Day Time	Night Time	Installation
Blue	Blue	White-- Connect to acc. Power Orange-- Do not connect
Red	Red	White-- Do not connect Orange-- Connect to acc. Power
Blue	Red	White-- Connect to acc. Power Orange-- Connect to Headlight Switched Power
Red	Blue	White-- Connect to Headlight Switched Power Orange-- Connect to acc. Power

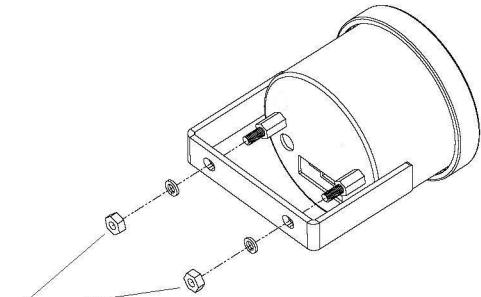

Do not over tighten bolts when installing U bracket. Doing so will cause damage to movement inside.


EVO Series Oil Temp and Water Temp

Blue / Red Display


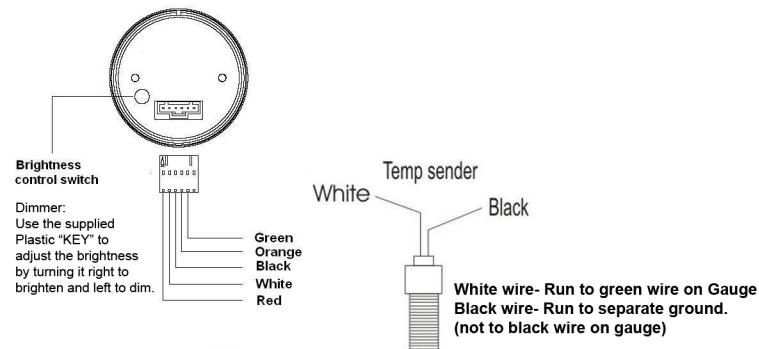


Wiring Instructions

Red Wire- 12v Accessory Power
White Wire- 12v Accessory Power
Black Wire- Ground
Orange Wire- 12v Headlight Switched Power
 (This is a power source that only gets power when headlights are on)
Green Wire- Run to the White wire on the sensor.
 Temp sensor thread pitch is 1/8th NPT. It is suppose to become tighter when installing. Please do not over tighten the sensor.

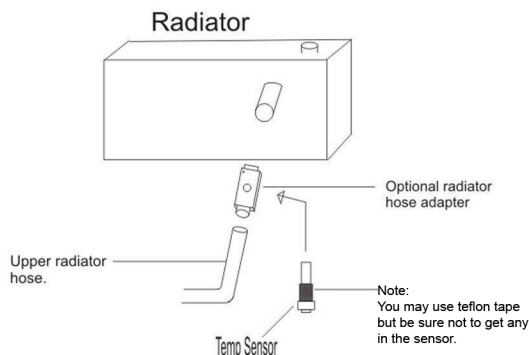

~Optional Oil adapter plate sold Separate

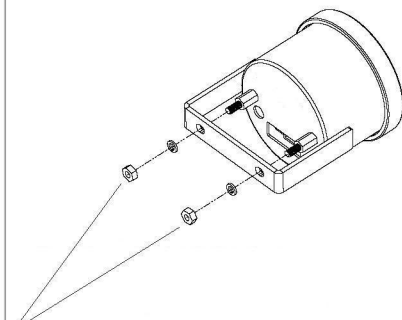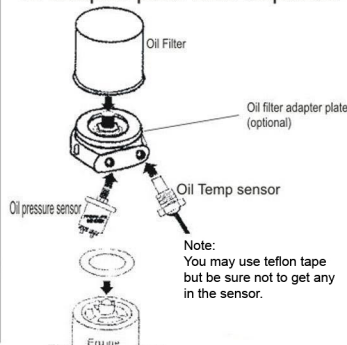

Do not over tighten bolts when installing U bracket. Doing so will cause damage to movement inside.

WWW.PROSPORTGAUGES.COM